


INSTALLATION INSTRUCTIONS


Wall Installation

Zclip hangers

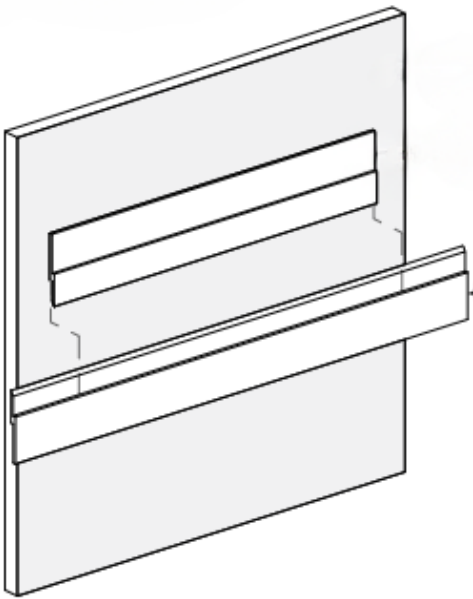

1. Measure out area on wall that will receive the panels to make sure of even and consistent layout top and bottom or where designated in specifications.
2. Note that a minimum 1" clearance at the panel top to allow install and removal, if needed, post install. It is recommended to have a z clip rail on wall every 4 linear ft of board minimum.
3. Before measuring and marking lines on wall, measure distance of screw holes of two z clips married.
4. Based on the height of the panels, install z clips on wall allowing for at least 1" from edge of board and gap between screw holes measured in step 2, for board installed clip.
5. Screw z clips on to board, adding glue to board where screw is installed on board and allow to dry.
6. Lift panel on to wall drop down for the panel clips and wall clips marry.

Construction Adhesive

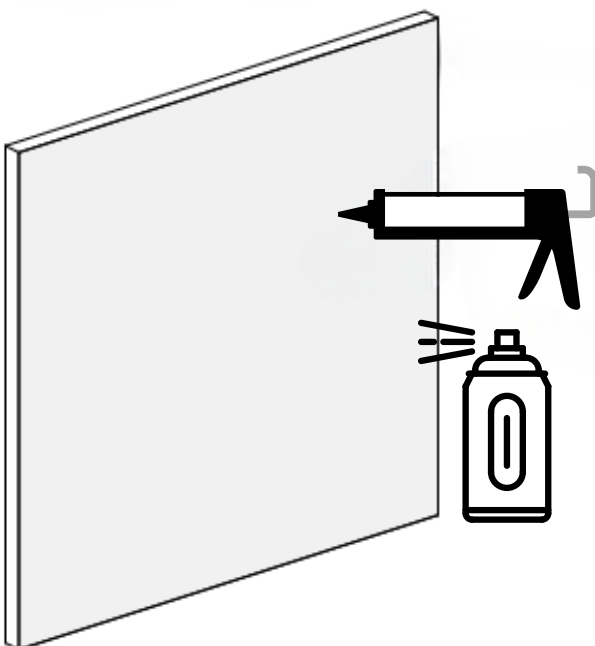


1. Wall and board must be clean and free of debris and oil.
2. Loctite PL Premium or equivalent recommended.
3. Tube applied adhesive should frame the board 3" from edge and also a line from corner to corner creating an 'X'.
4. Spray adhesives can be used in combination with applied adhesives for immediate hold for tube/applied adhesive to dry.
5. It is recommended to use a brace to keep boards in place while adhesive dries.



INSTALLATION INSTRUCTIONS


Wall Installation

2-prong impaler

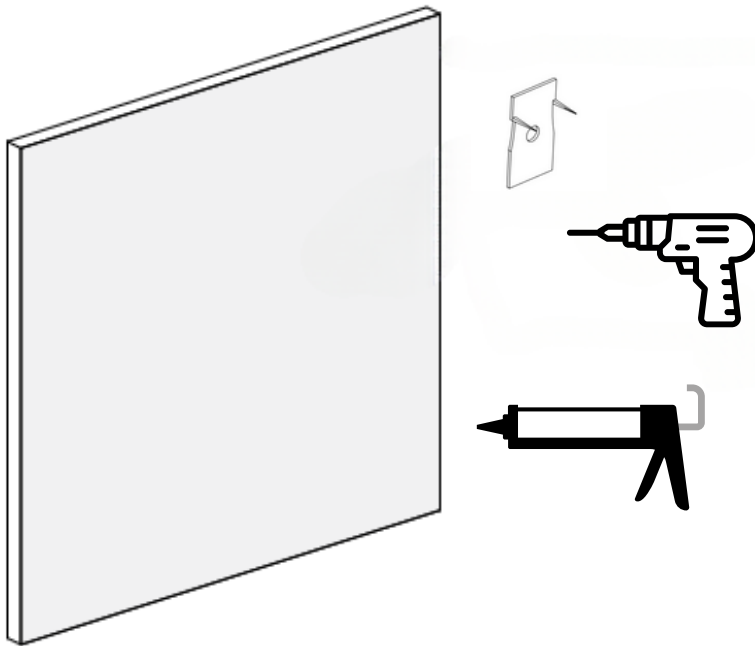

1. Measure locations on wall for board placement to make sure 2-prong impalers are at least 2" from board edge.
2. Use drywall or flathead screw to insure a solid board placement once installed.
3. Once 2 prong impaler is screwed in place, add a drop of adhesive on the impaler. Once the board is installed, this will chemically adhere the board to the impaler and not the wall allowing easier removal if needed at a future time.
4. Push boards on to the impaler
5. (4) 2-prong impalers are needed for a 2'x4' board.

Picture frame hanger

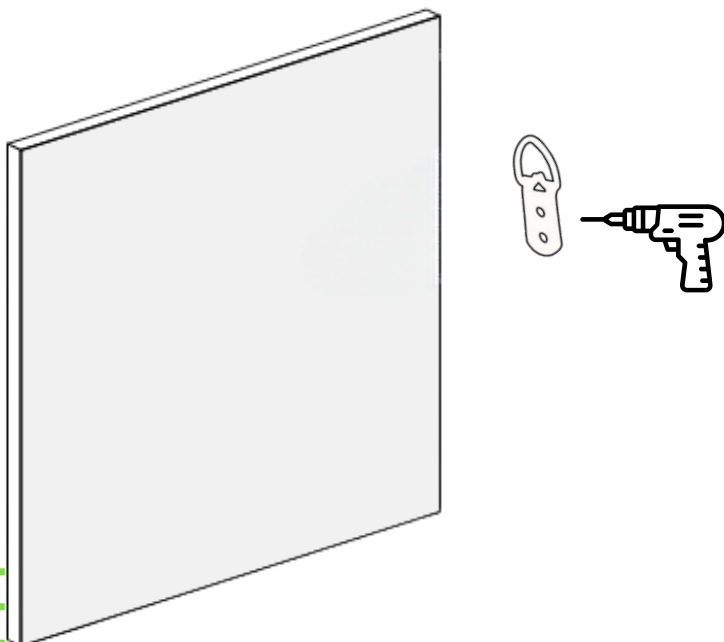


Temporary Wall Installation

Temporary install can easily be done by adding picture frame hangers.

1. Measure locations on the board for even placement.
2. Screw hangers on board with adhesive.
3. Measure and mark on wall locations for screws for hangers to rest.
4. Install screws on wall.
5. Hang panel on wall.


INSTALLATION INSTRUCTIONS

Ceiling Installation

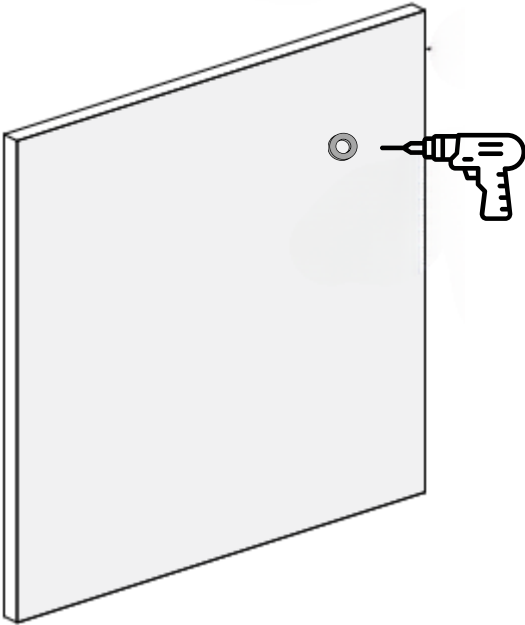

Magnet Installation

1. Measure locations on ceiling to insure boards would fit without interruption from piping, conduit etc.
2. Measure suitable locations on ceiling where magnet can attach to metal ceiling, mark on corresponding locations on board.
3. Apply small dot of adhesive, (Gorilla Glue brand recommended) on each dot.
4. Attached magnet on board allowing the screw to penetrate the dot of adhesive.
5. Once adhesive is dry, overnight, raise board to ceiling for magnets to grab hold of the metal ceiling.

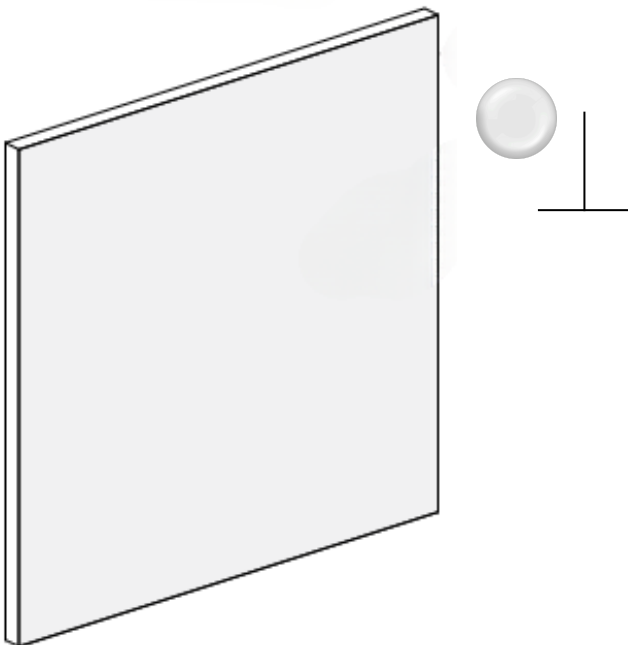

Pin & Cap Installation

1. Measure locations on ceiling to insure boards would fit without interruption from piping, conduit etc.
2. Glue impaling pin base to ceiling and allow to dry.
3. Push boards on to the impaling pins making sure hands are not underneath.
4. Once board is in place, lightly press dome caps on tips on pins. Once positioned, dome caps will lock into place and hold the board in place.