





### **1. WIPE SURFACE CLEAN.**

Anchor must be applied to a clean, dry, non-painted surface.

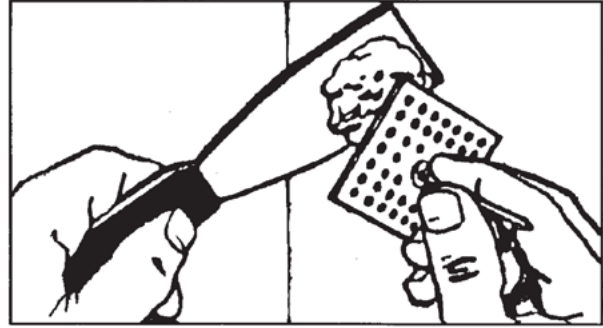


### **2. APPLY ADHESIVE TO ANCHOR.**

Spread 1/16 film Hanger Adhesive to base.

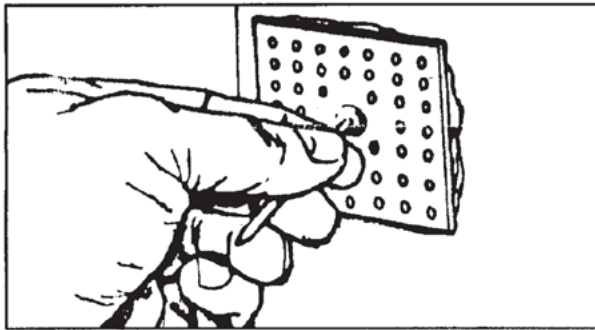


### **3. STICK ANCHOR IN PLACE.**

Press anchor into position with a twisting motion to assure an even spread of adhesive. The adhesive should protrude through the perforations & beyond the edges of the base.

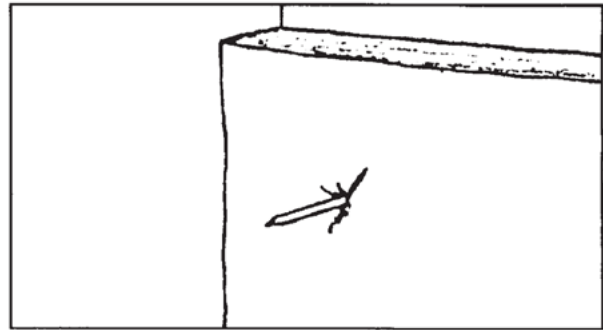

### **4. HANG INSULATION.**

NOTE: ALLOW ADHESIVE TO DRY THOROUGHLY before hanging insulation, usually 24-48 hours. Drying times vary with temperature and humidity.

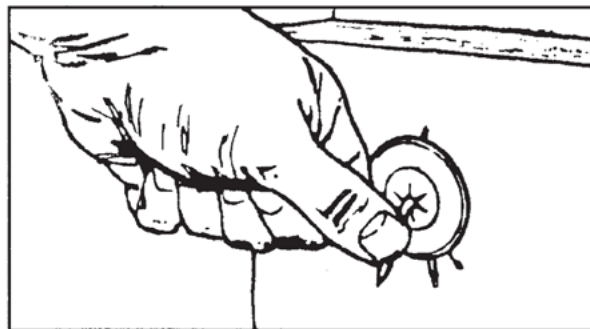

### **5. SECURE WITH WASHER.**

Secure insulation in place with a self-locking washer and then bend over or clip off the spindle.

To view our extensive line of products available for acoustical isolation visit:

[www.SoundAcousticSolutions.com](http://www.SoundAcousticSolutions.com)

11 Industry Drive • Cleveland, OH 44146 • Toll Free: (877) 399-9697

Email: [info@SoundAcousticSolutions.com](mailto:info@SoundAcousticSolutions.com)